



BSR-5032 Addressable siren with beacon for fire detection panel



| TECHNICAL CHARACTERISTICS | | | | | |
|---------------------------------|---|--|--|--|--|
| OPERATION VOLTAGE | 21-28V DC | | | | |
| STANDBY CONSUMPTION | 1mA | | | | |
| AVERAGE CONSUMPTION | 20mA | | | | |
| SOUND OUTPUT in1m | 87dB with jumpers / 78dB without jumper | | | | |
| TYPE OF APPLICATION ENVIRONMENT | Type A | | | | |
| DEGREES OF COVER PROTECTION | IP42 | | | | |
| PRODUCED IN ACCORDANCE WITH | EN 54-3 | | | | |
| OPERATION TEMPERATURE RANGE | -20 to 60 °C | | | | |
| RELATIVE HUMIDITY | Up to 95% | | | | |
| CONSTRUCTION MATERIAL | ABS/PC, PC | | | | |
| EXTERNAL DIMENSIONS | 141 x 141 x 95 mm | | | | |
| TYPICAL WEIGHT | 215gr. | | | | |
| GUARANTEE | 2 years | | | | |

Congratulations for your selection to buy this product. Olympia Electronics - European manufacturers.

GENERAL

BSR-5032 is a addressable siren unit, that has a sound indicator and a beacon. It works only with the panels fo the BSR-2100 series. BSR-5032 is recognized and programmed from the panel as a programmable siren. The panel references the SIREN unit with the name ``SIREN``. A red colored LED that blinks periodically in standby mode, is a power indication LED and indicator for the good operation of the device. When a device issues an alarm the LED lights continuously. When we silence the sirens, the LED remains lit to show us the device which issued the alarm. The LED goes off when you RESET the panel.

Each device has an address with which it is recognized from the panel. It is forbidden for two devices with same address to be connected to the same loop. The page 3, contain all the available address settings we can choose, by using the micro-switches. On each panel we can connect up to 127 BSR-5032 devices.

The siren is mounted with the screws which are in the packing box. It is installed indoors at a height of 2-3 metres from the floor.

The addressable siren unit can be set to addresses from 1-127.

Installation

To install the device, follow the installation instructions on page 4.

Volume adjustment

There are two jumpers on PCB A and B (Sound dB) which the volume and consumption is adjusted. I.e

A) If the two jumpers are not installed, then when the siren will be active the sound volume will be at 78dB/1m and the consumption will be 8mA.

B) If the two jumpers are installed, then when the siren will be active the sound volume will be at 87dB/1m and the consumption will be

20mA. The main tone frequency is 2.5kHz (±20%).

Certification


The addressable siren unit BSR-5032 is certified from EVPU. Also EVPU controls the production under CPD number:

BSR-5032 Addressable siren with beacon 1293-CPD-0357 EN-54-3



P.C. 60300 P.O. Box 06 Eginio Pierias Greece

Page 1 from 5 921503200 09 010

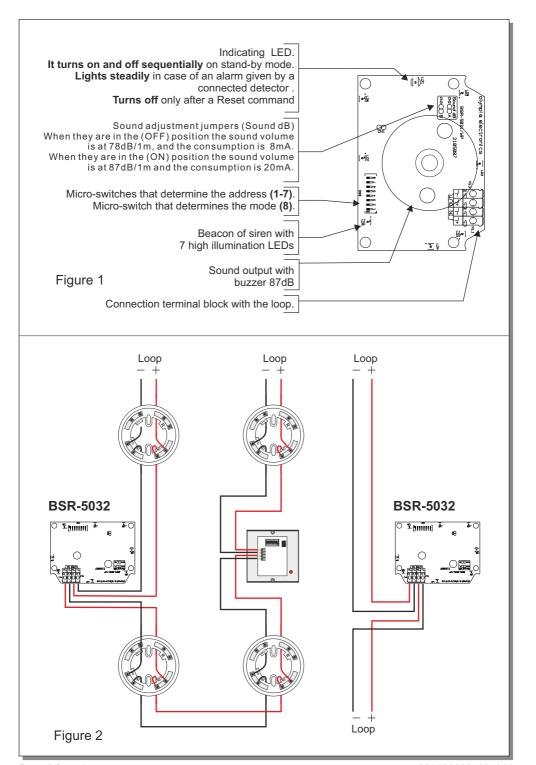

| Address D | ipswitch setting Ad | ddress | Dipswitch setting | Addre | Dipswitch setting | Address | Dipswitch setting |
|-----------|------------------------|--------|-------------------|-------|-----------------------|---------|-------------------|
| 1 ON | 4 5 6 7 8 | 31 II | 2 3 4 5 6 7 8 | 61 | ON 1 2 3 4 5 6 7 8 | 91 👖 | 2 3 4 5 6 7 8 |
| ON | | 32 I | 2 3 4 5 6 7 8 | 62 | ON 1 2 3 4 5 6 7 8 | 92 | 3 4 5 6 7 8 |
| 3 N | 45678 | 3 | 2 3 4 5 6 7 8 | 63 | ON 1 2 3 4 5 6 7 8 | 93 | 3 4 5 6 7 8 |
| 4 ON | 4 5 6 7 8 | 34 II | 2 3 4 5 6 7 8 | 64 | ON 1 2 3 4 5 6 7 8 | 94 P | 3 4 5 6 7 8 |
| 5 N | 4 5 6 7 8 | 35 II | 2 3 4 5 6 7 8 | 65 | ON 1 2 3 4 5 6 7 8 | 95 | 3 4 5 6 7 8 |
| 6 III | 4 5 6 7 8 | 36 🖺 | 2 3 4 5 6 7 8 | 66 | ON 1 2 3 4 5 6 7 8 | 96 I | 3 4 5 6 7 8 |
| 7 ON | 4 5 6 7 8 | 37 🖺 | 2 3 4 5 6 7 8 | 67 | ON 1 2 3 4 5 6 7 8 | 97 🗓 | 3 4 5 6 7 8 |
| 8 ON | 3 4 5 6 7 8 | 88 🖺 | 2 3 4 5 6 7 8 | 68 | ON 1 2 3 4 5 6 7 8 | 98 | 3 4 5 6 7 8 |
| 9 III | 4 5 6 7 8 | 39 👖 | 2 3 4 5 6 7 8 | 69 | ON 1 2 3 4 5 6 7 8 | 99 II | 3 4 5 6 7 8 |
| 10 ON | 4 5 6 7 8 | 10 PN | 2 3 4 5 6 7 8 | 70 | ON 1 2 3 4 5 6 7 8 | 100 I | 3 4 5 6 7 8 |
| 11 ON | 4 5 6 7 8 | 11 I | 2 3 4 5 6 7 8 | 71 | ON 1 2 3 4 5 6 7 8 | 101 n | 3 4 5 6 7 8 |
| 12 ON 123 | 4 5 6 7 8 | | 2 3 4 5 6 7 8 | 72 | ON 1 2 3 4 5 6 7 8 | 102 I | 3 4 5 6 7 8 |
| 13 N | 4 5 6 7 8 | 13 I | 2 3 4 5 6 7 8 | 73 | ON 1 2 3 4 5 6 7 8 | 103 | 3 4 5 6 7 8 |
| 14 ON 123 | 4 5 6 7 8 | 4 I | 2 3 4 5 6 7 8 | 74 | ON 1 2 3 4 5 6 7 8 | 104 I | 3 4 5 6 7 8 |
| 15 ON 123 | 4 5 6 7 8 | 15 I | 2 3 4 5 6 7 8 | 75 | ON 1 2 3 4 5 6 7 8 | 105 🗓 | 3 4 5 6 7 8 |
| 16 III | 4 5 6 7 8 | ŀ6 Ĥ | 2 3 4 5 6 7 8 | 76 | ON 1 2 3 4 5 6 7 8 | 106 I | 3 4 5 6 7 8 |
| 17 ON 123 | 4 5 6 7 8 | .7 ∄ | 2 3 4 5 6 7 8 | 77 | ON 1 2 3 4 5 6 7 8 | 107 👖 | 2 3 4 5 6 7 8 |
| 18 III | 4 5 6 7 8 | ŀ8 ☐ | 2 3 4 5 6 7 8 | 78 | ON 1 2 3 4 5 6 7 8 | 108 I | 3 4 5 6 7 8 |
| 19 12 3 | 4 5 6 7 8 | ŀ9 ∰ | 2 3 4 5 6 7 8 | 79 | ON 1 2 3 4 5 6 7 8 | 109 | 3 4 5 6 7 8 |
| 20 P | 4 5 6 7 8 | 0 I | 2 3 4 5 6 7 8 | 80 | ON 1 2 3 4 5 6 7 8 | 110 🖺 | 2 3 4 5 6 7 8 |
| 21 ON 123 | 4 5 6 7 8 | | 2 3 4 5 6 7 8 | 81 | ON 1 2 3 4 5 6 7 8 | | 2 3 4 5 6 7 8 |
| 22 P | 4 5 6 7 8 | 2 | 2 3 4 5 6 7 8 | 82 | ON 1 2 3 4 5 6 7 8 | 112 | 2 3 4 5 6 7 8 |
| 23 | 4 5 6 7 8 | 3 | 2 3 4 5 6 7 8 | 83 | 1 2 3 4 5 6 7 8 | 113 | 2 3 4 5 6 7 8 |
| 24 N | 4 5 6 7 8 | | 2 3 4 5 6 7 8 | 84 | 0N 1 2 3 4 5 6 7 8 | 114 | 2 3 4 5 6 7 8 |
| 25 PN 123 | 4 5 6 7 8 | 55 | 2 3 4 5 6 7 8 | 85 | ON 1 2 3 4 5 6 7 8 | 115 | 2 3 4 5 6 7 8 |
| 123 | 45678 | 6 | 2 3 4 5 6 7 8 | 86 | 0N 1 2 3 4 5 6 7 8 | | 3 4 5 6 7 8 |
| 27 III | 5 | | 2 3 4 5 6 7 8 | 87 | ON 1 2 3 4 5 6 7 8 | | 2 3 4 5 6 7 8 |
| 28 P | 5 | | 2 3 4 5 6 7 8 | 88 | ON 1 2 3 4 5 6 7 8 | | 3 4 5 6 7 8 |
| 123 | 45678 | 9 | 2 3 4 5 6 7 8 | 89 | ON 1 2 3 4 5 6 7 8 | | 2 3 4 5 6 7 8 |
| 30 I | 4 5 6 7 8 | 0 🖟 | 2 3 4 5 6 7 8 | 90 | ON 1 2 3 4 5 6 7 8 | 120 🗓 | 3 4 5 6 7 8 |

Page 3 from 5 921503200_09_010

Installation and Connection

- 1. First, remove the retaining screw, place a flat blade screwdriver in the holes of the plastic hooks and remove the plastic cover (Image 1).
- 2. Use the supplied mounting parts to install the siren's base on the wall. Place the plastic plugs and fasten the screws to the mounting holes.
- **3.** Place the caps and make a hole in the center using a small screwdriver. Pass through the caps the cables to connect the device.
- **4.** Connect the siren as shown in figure 2 (page 2). Similarly all sirens are connected in parallel (the maximum number depends on the panel).
- **5.** Refit the plastic cover until the plastic hooks are securely attached (step 1) and fasten the retaining screw (torque 0.6Nm).
- **6.** Test the device after installation.



Image 1



Image 2

| Operation Mode | Dipswitch setting |
|---------------------------|------------------------------|
| Slow rate of buzzer sound | ON 1 2 3 4 5 6 7 8 |
| Fast rate of buzzer sound | 1 2 3 4 5 6 7 8 |

Sound adjustment jumpers (dB) The factory seting for the jumpers is in the (OFF) position





NOTE!!! After finishing the installation, place the SEAL sticker as shown in the picture.

WARRANTY

Olympia Electronics guarantees the quality, condition and operation of the goods. The period of warranty is specified in the official catalogue of Olympia Electronics and also in the technical leaflet, which accompanies each product. This warranty ceases to exist if the buyer does not follow the technical instructions included in official documents given by Olympia Electronics or if the buyer modifies the goods provided or has any repairs or re-setting done by a third party, unless Olympia Electronics has fully agreed to them in writing. Products that have been damaged can be returned to the premises of our company for repair or replacement, as long as the warranty period is valid. Olympia Electronics reserves the right to repair or to replace the returned goods and to or not charge the buyer depending on the reason of defection. Olympia Electronics reserves the right to charge or not the buyer the transportation cost.

HEAD OFFICE

72nd km. O.N.R. Thessaloniki-Katerini P.C. 60300 P.O. Box 06 Eginio Pierias Greece www.olympia-electronics.gr info@olympia-electronics.gr

Page 5 from 5 921503200 09 010